

 
 


# Model CSD1X2 Ceiling Drop-In Speaker

## 70V & 25V Speaker Systems

### Electrical Connection


1. Remove electrical box cover, then install cable clamp (if desired), and feed interconnecting cable into the electrical box.
2. Select speaker leads for desired system type: 70V - Red, 25V - Yellow, and COM - Black for both. Interconnect the speakers in the system, making sure that all leads of the same color are connected together. Avoid swapping colors.
3. Cut bare wire tip off of unused speaker lead. Secure all mechanical connections and re-install electrical box cover.
4. Set tap selector switch to proper tap setting.

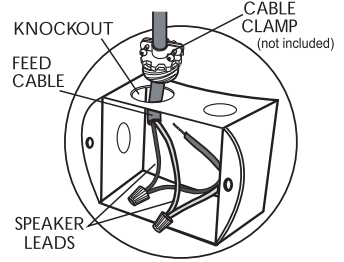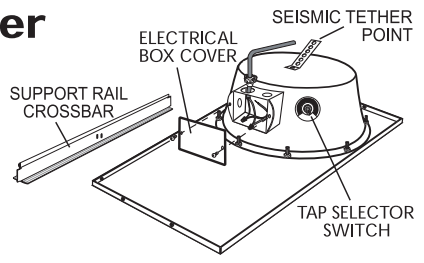

### Ceiling Installation

1. For 2 ft. X 4 ft. tile space, cut ceiling tile to 35-1/2" long or for a 2 ft. X 2 ft. tile space, cut to 11-1/2" long.
2. Place speaker in ceiling with the tile support rail crossbar facing the ceiling tile opening.
3. Drop in the tile.

 Lead	Color
70V	Red
25V	Yellow
COM	Black

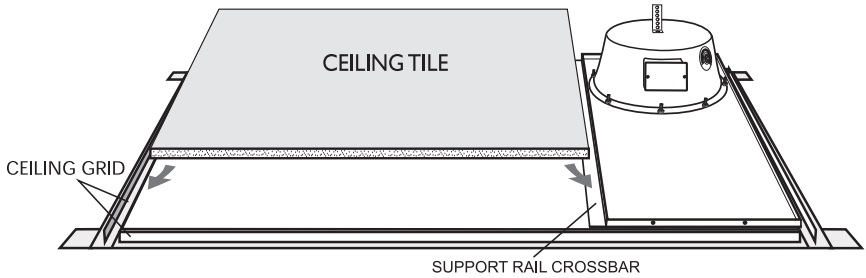

### 2-YEAR WARRANTY

The CSD1X2 is warranted to be free from defects in material or workmanship for two (2) years from the date of sale to the original purchaser. This warranty does not extend to any of our products that have been subjected to abuse, misuse, improper storage, neglect, accident, improper installation or have been modified or repaired or altered in any manner whatsoever, or where the serial number or date code has been removed or defaced.



Control # 3092039

## BOGEN COMMUNICATIONS, INC.

50 Spring Street, Ramsey, NJ 07446, U.S.A  
Tel. 201-934-8500, Fax: 201-934-9832, www.bogen.com  
Specifications subject to change without notice  
© 2004 Bogen Communications, Inc.  
53-2070-01E Made In China 0703